 


CARING+ CLEANING

GUIDE FOR OUTDOOR FURNITURE

WICKER & FABRIC

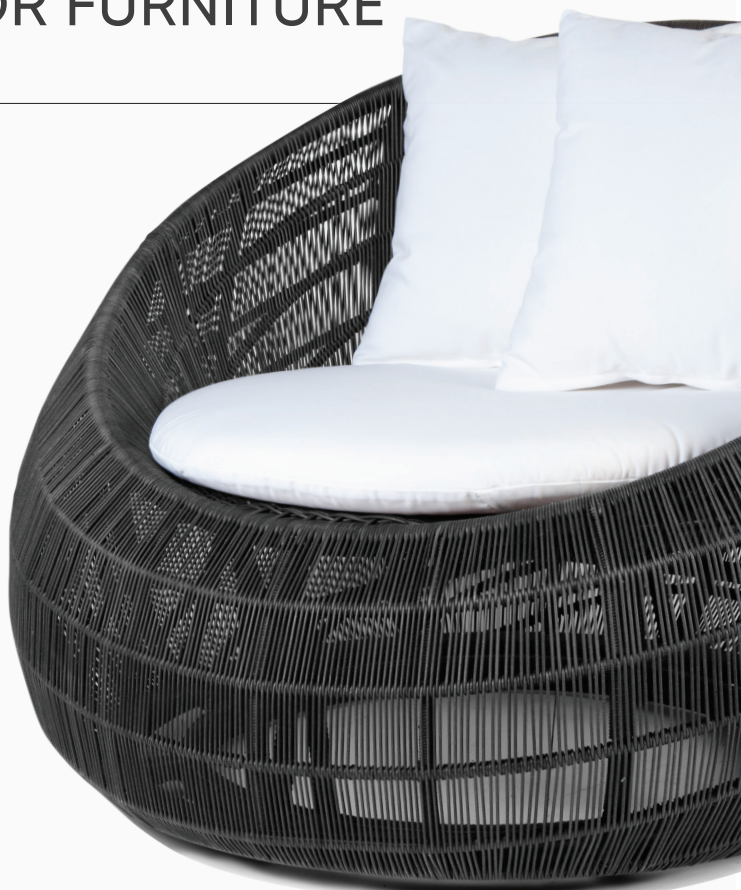

Terms and conditions (of the guide)

Wintons Teak endeavour to have all information in this guide correct, however, there can be errors, in such case we apologise for any inconvenience caused and it may be necessary to change information in this guide.

WintonsTeak®

SYNTHETIC RATTAN QUALITY FEATURES

The synthetic rattan furniture in our collection is hand-woven using synthetic fibre made from extruded High Density Polyethylene (HDPE). The synthetic fibre is recyclable, tear and UV resistant which makes it ideal for outdoor furniture.

HANDLING SYNTHETIC RATTAN FURNITURE



DO:

Always lift and handle from the aluminium structure.



DO NOT:


Grab or pinch the weaving when moving furniture. Always lift and handle from the aluminium structure.

CARING FOR SYNTHETIC RATTAN



GENERAL CLEANING

Wintons Teak recommends to occasionally clean your outdoor wicker furniture. This ensures that no dirt and foreign object attaches itself onto the material, which over time promotes mould and fungal growth. To clean your wicker furniture, simply rinse its surface with cold water using a garden hose. Do not use a high pressure hose! Regular dusting of your furniture is recommended to rid it of spider webs and dirt. Always use a soft brush or duster.

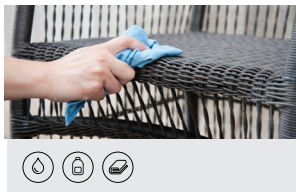




TOUGH STAINS

Use a solution with an equal amount of water and vinegar (do not use coloured vinegar such as red wine or balsamic) or non-foaming mild soap. Rub the solution onto the material using a soft cloth and rinse with clean water and towel dry afterwards.



TOOLS

-  WATER
-  VINEGAR
-  CLOTH
-  GARDEN HOST



AVOID !

DO NOT USE A FOAMING CLEANER to clean your synthetic rattan furniture. This is because foam can be trapped between the weaving, attracting dirt which is difficult to remove. **DO NOT DIRECTLY EXPOSE THE FURNITURE TO EXTREME HEAT OR COLD**, such as a hot saucepan/flame or dry ice, as it will cause the product to melt or become brittle. This will leave a permanent mark or may cause the fibre to break.

IT IS IMPORTANT TO USE THE FURNITURE AS IT IS INTENDED. This means that it is important not to sit on the armrests, sit on the tabletop or to pivot on the chairs.

KEEP FURNITURE AWAY FROM SHARP OBJECTS. Synthetic wicker is prone to break when pressed against sharp objects (such as knives, scissors, etc). Please pay special attention when removing packaging material using sharp objects. **DO NOT USE EXCESSIVE FORCE TO CLEAN YOUR FURNITURE.** Excessive force from a power washer or high pressure hose will damage and unravel the weaving. Never use a power washer or high pressure hose.

WHAT TO EXPECT FROM OUTDOOR CUSHION FABRIC

Wintons Teak offers three different fabric options with selections of colour and patterns. Depending on the fabric that you have chosen, they have differing quality features which affects colour-fastness and durability.



OLEFIN

Olefin is a stronger and more colourfast fabric for outdoor use. This is because Wintons Teak olefin fabric is yarn-dyed, which means the yarn woven into the fabric has already had colouring in them. As it is more colourfast, Wintons Teak recommends using Olefin for darker colour choices.




ACRYLIC BY SUNBRELLA

Acrylic fabric by Sunbrella is the top of the range option within Wintons Teak offering. The dying process begin before the yarn is created, which means the acrylic resin to be spun into yarn has been coloured. This process is referred to as solution-dyeing and allows the colour to experience very little fading over time. Hence, the reason for paying a considerable premium for a Sunbrella cushion cover.

TYPE OF FABRIC	COLOURFASTNESS	RESISTANCE TO MOULD AND MILDEW	STAIN RESISTANCE
Olefin	Good, which allows the fabric to be placed in an open outdoor area under direct sunlight	Fabric is mould and mildew resistant. However, mould can grow on dirt and food residues sitting on top of the fabric.	All Wintons Teak outdoor fabric has been treated for soil and stain resistance. However, over time this protection will wear off. Ensure that any spills and dirt are cleaned immediately to avoid staining.
Acrylic by Sunbrella	allows the fabric to be placed in an open outdoor area under direct sunlight.	Regular washing will minimise mould and mildew growth.	In instances when your outdoor cushion is stained, please follow the fabric care label found inside your cushion cover.

CARING FOR YOUR OUTDOOR CUSHION FABRIC

As each fabric is made from different materials, we recommend that you refer to the care and cleaning instructions below. A summary of this is available on the attached cleaning and caring label found underneath the cushion cover.

CRITERIA	OLEFIN	ACRYLIC BY SUNBRELLA
Washing and Temperature	 	 
	Machine Wash Warm. Machine Wash Gentle or Delicate.	Machine Wash Cold. Machine Wash Gentle or Delicate
Bleach		
	Bleach When Needed.	Bleach When Needed.
Dryclean Instructions		
	Do Not Dry clean	Do Not Dry clean
Drying		 
	Tumble Dry, Normal, Low Heat.	Do Not Tumble Dry, Do Not Wring.
Ironing		 
	Iron, Low.	Iron, Low. Do Not Steam.

CLEANING YOUR OUTDOOR CUSHION FABRIC



SPILLS AND STAINS

All Wintons Teak outdoor fabric has been treated for soil and stain resistance. Blot new spills. Do not rub spills as it spreads the stains on the fabric.

If fabric remains dirty, apply 10-20 ml of detergent solution on top of the spot, and use a very soft bristle brush to clean. Avoid scrubbing, hard bristled brushes or any other abrasive cleaning method. Place fabric under cool tap water to remove excess detergent and air dry.




MOULD/FUNGI SPORES ON THE SURFACE





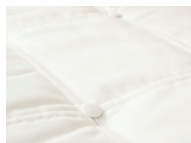

Wintons Teak outdoor fabric is mould and mildew resistant. However, mould can grow on dirt and food residues sitting on top of the fabric. Regular washing will minimise mould and mildew growth. Should there be mould and mildew growth, clean the fabric with a solution of white vinegar and warm water.

For sunbrella fabric, light bleach can be used to clean mould and mildew growth. For details on how to clean sunbrella fabric, please refer to the Sunbrella official website. General cleaning: <https://www.sunbrella.com/en-us/how-to-clean/clean-sunbrella-upholstery>

Detailed stain cleaning: <https://www.sunbrella.com/en-us/how-to-clean#>



TOOLS

-  WATER
-  VINEGAR
-  CLOTH
-  GARDEN HOST
-  WASHING MACHINE
-  FABRIC CLEANING PRODUCT



AVOID !

DO NOT USE WINTONS TEAK OUTDOOR FOAM WITHOUT A CUSHION COVER. The outdoor foam is not designed to be used without a cushion cover. This is because the open pore structure can trap dirt and blocks the flow of moisture. Any moisture retained will cause the foam to grow mould after some time.

CARING+ CLEANING

GUIDE FOR
OUTDOOR FURNITURE

WICKER & FABRIC



If you have any enquiry
please contact customer
service team:

customer_service@wintonsteak.com

WintonsTeak®



Terms and conditions (of the guide)

Wintons Teak endeavour to have all information in this guide correct, however, there can be errors, in such case we apologise for any inconvenience caused and it maybe necessary to change information in this guide.

